

AL602ULADA(J) AL802ULADA(J) AL1002ULADA(J) NAC Power Extenders

Application Guide

(See Installation Guide for additional information)



1. General Information (Use this in conjunction with respective Installation Guide):


Altronix AL602ULADA, AL602ULADAJ, AL802ULADA, AL802ULADAJ, AL1002ULADA and AL1002ULADAJ are very versatile devices. They can be used with or without specific synchronization modules provided by some manufacturers. Multiple units can be synchronized by using either the built-in sync mode or a external synchronization module. Please note, that only notification appliances with synchronization capabilities can be synchronized. Contact signal manufacturer for more detailed information. Units can operate with either one (1) or two (2) outputs from the FACP.

2. Class A, Style Z and Class B, Style W, Y Hookups:

Units can be used with the outputs configured for:

- Two (2) Class A, Style Z (Fig. 2a).
 Up to Four (4) Class B, Style W, Y
- Two (2) Class B, Style W, Y and one (1) Class A, Style Z NAC circuits (Fig. 2b).


Fig. 2a

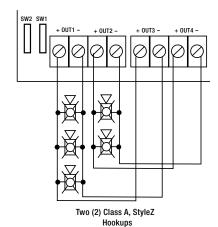

NAC Loop 1 starts on Output 1 and terminates on Output 3. Switch SW1, when closed, provides proper termination for this loop. NAC Loop 2 starts on Output 2 and terminates on Output 4, SW2 must be closed for proper termination.

Please make sure that all the dip switches for corresponding outputs are set the same way.

Fig. 2b

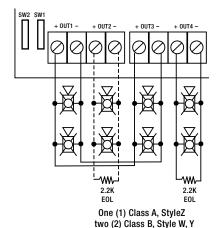

Hookups

For combination of two (2) Class B, Style W, Y and one (1) Class A, Style Z circuit, only one (1) switch (SW1 or SW2) must be closed, terminating Class A circuit only.

- 2 - O2ULADA Application Notes

3. Non-synchronizable NAC Appliances:


When using NAC appliances not designed to support synchronization feature, it is recommended to use separate output circuits for audible notification appliances (horns) and visual notification appliances (strobes). Set dip switches for the visual notification appliances to follow Input 1 [IN1] and for audible notification appliances to follow Input 2 [IN2]. This will allow, when using two (2) outputs from the FACP, to support silencing of audible notification appliances. When using only one (1) FACP output, set all dip switches to follow Input 1 [IN1]. The units outputs can each be set for the desired NAC drive signal, such as Code 3 or march time sequence (Output Programming Selection Table, pg. 6). Non-synchronizable Audible Appliances will follow the sequence, when feature is selected.

4. Using Multiple NAC Power Extenders from an FACP:

AL602/AL802/1002ULADA(J) units are designed to follow (replicate) the coded sequence, generated by a manufacturer's sync module. One (1) or more units can be triggered. Connect the output of the FACP module to Input 1 and Input 2 Terminate the input circuit with the EOL or FACP, connecting it to terminals marked [RET+ and RET-], or continue the input circuit, connecting to terminals marked [RET+ and RET-] to [INP+ and INP-] of the next unit, when multiple units need to be triggered.

In case FACP does not have any synchronization capabilities and the sync mode is not used, the notification appliance synchronization will not be provided.

Fig. 4a

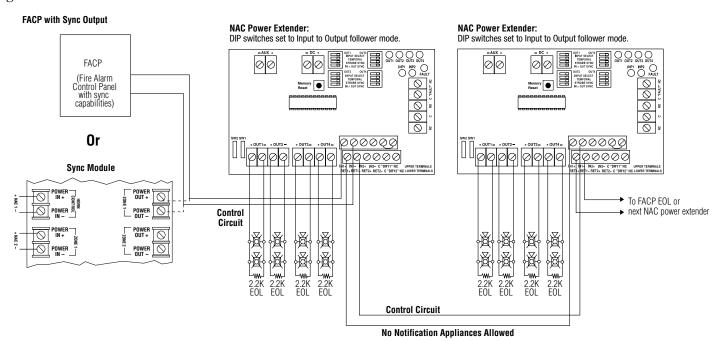

Caution: Do not connect any notification appliances on the control circuit interconnecting FACP outputs (sync module outputs) and inputs of NAC Power Extenders. Applications that do not employ synchronization module or FACP with synchronization protocol will not provide NAC sycnchronization between NAC Power Extenders.


02ULADA Application Notes - 3 -

5. Synchronizing NAC Power Extender Using Built-in Sync Protocol:

AL602/AL802/1002ULADA(J) have built-in protocols to support Amseco, Faraday, Gentex® and System Sensor®, Wheelock® two-wire synchronizable devices, therefore an external sync module is not required (Output Programming Selection Table, pg. 6). In these modes, Input 1 is always used to activate visual notification appliances (strobes), and Input 2 is used to activate and silence audible notification appliances (strobes).

Note: Input 1 has to be activated in all the configurations.

Fig. 5a

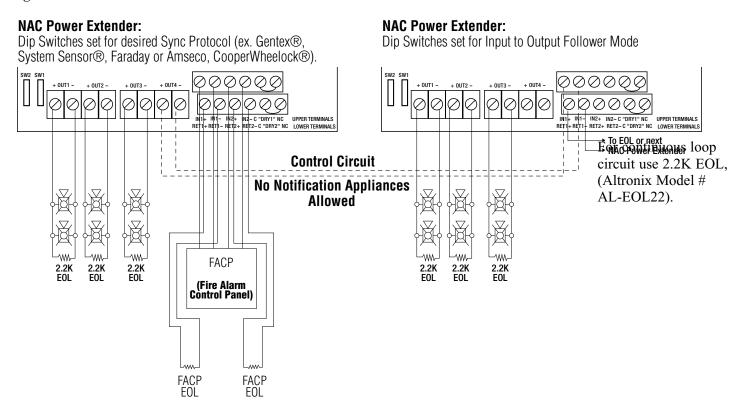


When connecting, keep wires on different sides of the screws in order to maintain loop integrity supervision. DO NOT LOOP CONTINUOUS WIRE AROUND THE SCREW.

- 4 - O2ULADA Application Notes

6. Using a Single FACP Output:

When only one FACP output is available, you may connect both Input1 and Input2 to it. Wire [RET1+ and RET1-] to [INP2+ and INP2-]. Both visual and audible notification appliances will be activated simultaneously (*Fig. 6a*).

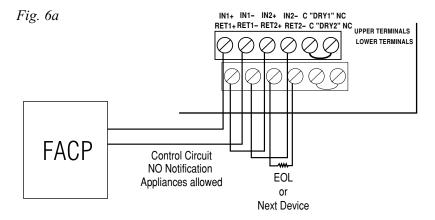

02ULADA Application Notes - 5 -

Output Programming Selection Table:

Outputs must be programmed independently [OUT1 - OUT4]

Function	Switch Position		Description
	ON	OFF	Description
Input to Output Follower Mode	1	2, 3	Output follows signal it receives from the corresponding input (i.e. FACP Sync module - maintains synchronization of notification appliance circuit.
Temporal Code 3 Mode	3	1, 2	Enables Temporal Code 3 signal generation output. This mode is activated by a steady or a pulsing input.
Steady Mode	N/A	1, 2, 3	A steady output signal will be generated. This mode is activated by a steady or pulsing input.
March Time Mode (60 beats per minute)	2, 3	1	Enables a March Time output which will sound 60 beats per minute. This mode is activated by a steady or pulsing input.

For the above modes Dip Switch 4 determines which Input controls the corresponding output:

Switch 4 in the ON position causes output(s) to be controlled by input 1. Switch 4 in the OFF position causes output(s) to be controlled by input 2.

(AL800LGK9E Board Output Dip Switches					
	INPUT SELECT				
	TEMPORAL				
	STRORE SYNC				

IN>OUT SYNC

Sync Mode Selection Table:

Eunation	Switch Position		D
Function	ON	OFF	Description
Amseco Sync Mode*	1, 3, 4	2	This mode is designed to work with the Amseco series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.
Faraday Sync Mode*	2, 4	1, 3	This mode is designed to work with the Faraday series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.
Gentex Sync Mode* Gentex is a registered trademark of Gentex Corporation.	1, 2, 3, 4	N/A	This mode is designed to work with the Gentex® Commander GOS and ST/HS series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two (2)-wire circuit while leaving strobes active.
System Sensor Sync Mode* System Sensor is a registered trademark of Honeywell.	1, 2, 4	3	This mode is designed to work with the SpectrAlert [™] series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the one-second flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.
CooperWheelock® Sync Mode*	2, 3, 4	1	This mode is designed to work with the Wheelock series of horns, strobes, and horn/strobes to provide a means of synchronizing the Temporal-coded horns, synchronizing the one-second flash timing of the strobe, and silencing the horns of the horn/strobe combination over a two-wire circuit while leaving strobes active.

Note: The AL602ULADA, AL602ULADAJ, AL802ULADA, AL802ULADAJ, AL1002ULADA and AL1002ULADAJ will only synchronize horns, horn strobes and strobes that contain synchronization capability. Contact signal manufacturer for more detailed info. The same synchronization mode must be selected for all outputs.

- 6 - O2ULADA Application Notes

Notes:

02ULADA Application Notes - 7 -

Notes:



- 8 -