


Shows interactive keypad icons, and shows the date and time. The icons light only when available.

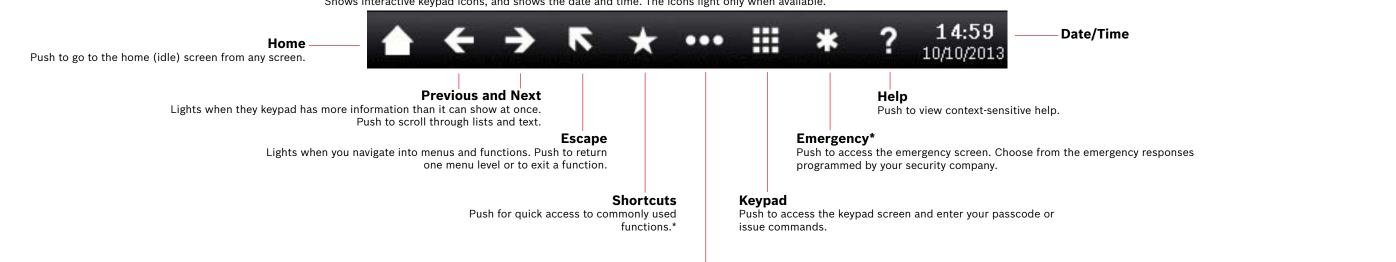

Main menu

Push to show and access keypad features.



On/Off

Push to turn areas All or Part On, to turn areas off, to extend closing time, or to bypass points.



Actions

Push to reset sensors, change outputs, see the test menu, see the RPS menu, go to an area, update system firmware, or to view service bypassed points.



Settings

Push to turn Watch mode on or off, set the system date and time, view and change schedules, set keypad brightness and volume, and show the time in the keypad display.



Events

Push to view event memory, clear event memory, or view the event log.



Status

Push to see area or point status, or to send a status report.



Users

Push to change your own passcode, add new users, edit existing users, or to delete users.



Shortcuts

Push to access common functions.*

2 | Turn on (arm) your system

Push the Ready to arm icon:



– or – Push the icons to access the All On or Part On menu, and then follow the prompts:













Choose from on with a delay, on without a delay, or on by area.

With all methods, the security system begins to turn on with a delay, showing additional icons during the delay. To change how the system turns on, press the desired icon.

3 | Turn off (disarm) your system

Push the On icon or the Part On icon:





Push the icons to access the All On or Part On menu, and then follow the prompts:







4 | Edit users

You can use Edit Users to change passcodes and to add, remove, and replace cards and tokens.


5 | Change passcodes

You can change your own passcode and the passcodes of other users if you have the authority to do so.

 To change your passcode, press the icons to access the Change Passcode menu, and then follow the prompts:







To change a user passcode, press the icons to access the Edit Users menu, and then follow the prompts:







> Edit User

Enter the number for the user you wish to edit, and press [ENTER]. Press [Continue], and then go to the Passcode menu and follow the prompts.

6 | Alarms

When the security system is in alarm, the Alarm icon shows.



Press the Alarm icon and then follow the prompts.

7 | Shortcuts

You can access your shortcuts using different methods. Do one of the following:

Press the icons to access the Shortcuts menu, and then press the desired shortcut:





desired shortcut:



Press the Shortcuts icon on the Ribbon bar, and then press the



8 | Keypad cleaning

Use a soft cloth and non-abrasive cleaning solution to clean your keypad (for example, microfiber cloth and eyeglass cleaner). Spray the cleaner onto the cloth. Do not spray cleaners directly onto the keypad.

Copyright

This document is the intellectual property of Bosch Security Systems B.V. and is protected by copyright. All rights reserved.

All hardware and software product names used in this document are likely to be registered trademarks and must be treated accordingly.



Touch Screen Keypad



en Quick user guide

Bosch Security Systems B.V.

Torenallee 49 5617 BA Eindhoven Netherlands

www.boschsecurity.com

© Bosch Security Systems B.V., 2019

