

功能导航栏 显示交互式键盘图标,并显示日期和时间。图标仅在可用时亮 起。



主菜单 按下以显示和访问键盘功能。



按下以打开或关闭监视模式、设置系统日期和时间、查看并 更改 时间表、设置显示屏亮度和音量,还可以在键盘的显示 屏上显示 时间。





按下以将分区全部布防或部分布防、撤防、延长布防时间

布防/撤防

或旁路 防区。

按下以查看分区或防区状态、或者发送状态报告。

操作

TOP



单、 转至分区、更新系统固件或查看服务旁路防区。

按下以重置传感器、更改输出、查看测试菜单、查看RPS菜

按下以更改您自己的密码、添加新用户、编辑现有用户或删除 用户。



快捷键 按下以访问常用功能。*

9

主图标

Date/Time



事件 按下以查看事件存储器、清除事件存储器或查 看事件日志。

2 | 对系统进行布防

按下"布防就绪"图标:



按下此图标可访问"全部布防"或"部分布防"菜单,然后按照以下 提示操作:

- 或 _



请从延迟布防、无延迟布防或分区布防中进行选择。

操作后,防盗系统将开始延迟布防,在延迟期间会显示更多图标。要更改系统布防方式,请按下所需图标。

3 | 对系统进行撤防

按下"布防"或"部分布防"图标



或 _____

按下此图标可访问"全部布防"或"部分布防"菜单,然后按照以下 提示操作:



4|编辑用户

您可以使用"编辑用户"更改密码,以及添加、移除和更换卡和感 应匙。

5 | 更改密码

若您具有相应权限,则可更改自己和其他用户的密码。

要更改您的密码,请按下此图标以访问"更改密码"菜单,然后按照以下提示操作:



要更改用户的密码,请按下此图标以访问"编辑用户"菜单,然后按照以下提示操作:



输入要编辑用户的编号,然后按下[ENTER]。按下[Continue], 转到"密码"菜单,然后按照提示操作。

6|报警

当防盗系统处于报警状态时,会显示"报警"图标。



按下"报警"图标,然后按照提示操作。

7 | 快捷键

您可通过多种方法使用快捷键。请执行以下操作之一:







·-----

按下功能导航栏中的快捷键图标。
按下快捷键。



8|键盘清洁

使用软布和非磨蚀性清洁溶液来清洁键盘(例如超细纤维布和镜 片清洁剂)。将清洁剂喷在软布上。请勿将清洁剂直接喷到键盘 上。

Copyright

This document is the intellectual property of Bosch Security Systems B.V. and is protected by copyright. All rights reserved.

或

Trademarks

All hardware and software product names used in this document are likely to be registered trademarks and must be treated accordingly.





Touch Screen Keypad B940W



zh 快速用户指南

Bosch Security Systems B.V. Torenallee 49 5617 BA Eindhoven Netherlands www.boschsecurity.com © Bosch Security Systems B.V., 2019

Bosch Security Systems B.V.