



1 - How to login:

 
-) Swipe your card on the left hand side speaker to login.

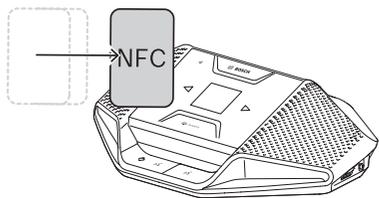

- Avatar icon means successful login.
- A no-entry sign means login failed.

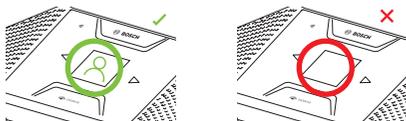

-) Stable/solid wifi icon shows that you have identified yourself successfully.
-) Fast blinking wifi icon or no-entry sign show that the identification was not successful.




To log out

Log out by swiping your card again.

2 - How to select a language:


- Plug in the headphones and press the triangle buttons if it is not automatically selected.
- If you log in using NFC, your preferred language will be selected by default.

3 - How to adjust the volume:

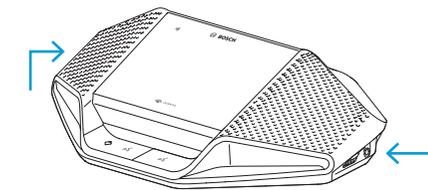

- Adjust the headphone volume by scrolling the volume wheel on the side your headphone is plugged.

4 - What buttons to press:

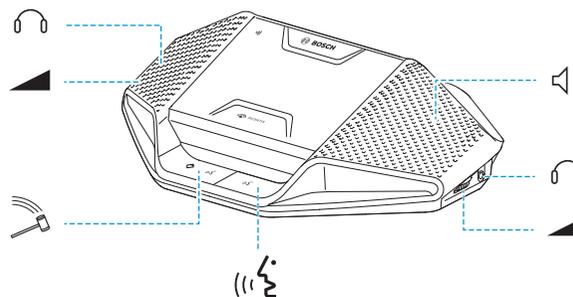

- Press and hold to mute the microphones of all participants.
- Press to activate the microphone.

- GREEN LED:** Indicates that a request-to-speak is accepted. Flashing indicates first in list. You cannot speak until red light.
- RED LED:** Power on button indicates that the microphone is active you can push the microphone button to disable. Flashing indicates last minute.
- WHITE LED:** White speaker icon indicates that the floor is granted when the button is pressed.

