



**1 - How to login:**

 
- ) Swipe your card on the left hand side speaker to login.

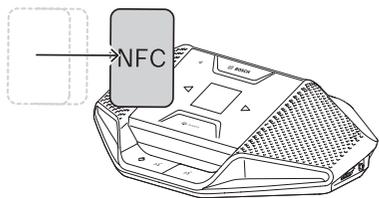

- Avatar icon means successful login.
- A no-entry sign means login failed.

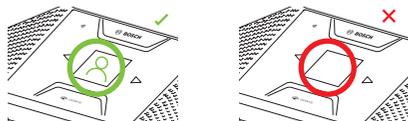

- ) Stable/solid wifi icon shows that you have identified yourself successfully.
- ) Fast blinking wifi icon or no-entry sign show that the identification was not successful.



**To log out**


Log out by swiping your card again.



**2 - How to select a language:**


- Plug in the headphones and press the triangle buttons if it is not automatically selected.
- If you log in using NFC, your preferred language will be selected by default.

**3 - How to adjust the volume:**

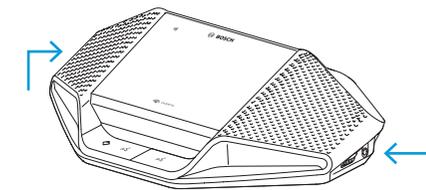


- Adjust the headphone volume by scrolling the volume wheel on the side your headphone is plugged.


**4 - What buttons to press:**

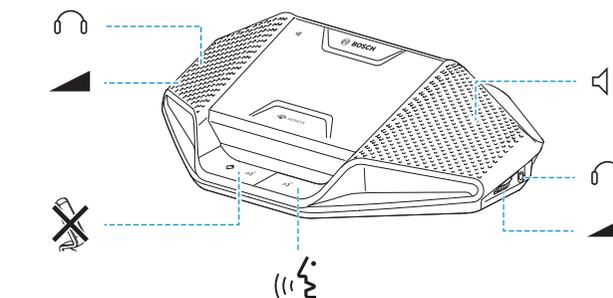


- Press to issue or cancel microphone request.
- Press to temporary mute the microphone.

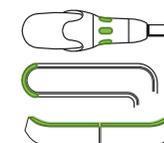

**GREEN LED:**  
Indicates that a request-to-speak is accepted.  
Flashing indicates first in list.  
You cannot speak until red light.

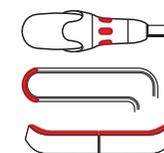

 **RED LED:**  
Power on button indicates that the microphone is active you can push the microphone button to disable.  
Flashing indicates last minute.



**WHITE LED:**  
White speaker icon indicates that the floor is granted when the button is pressed.