



1 |

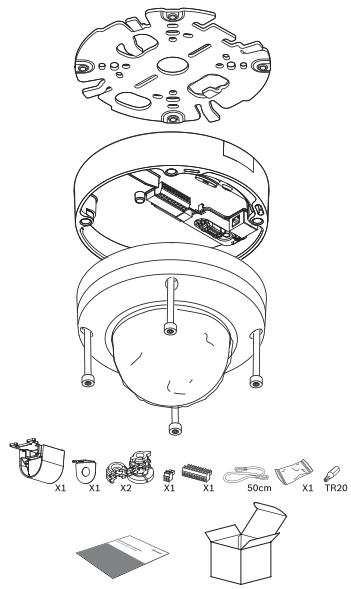


2 |


PIN	Connection
1	+12V OUT
2	GND
3	ALARM OUT
4	ALARM OUT
5	GND
6	ALARM IN1
7	ALARM IN2
8	GND
9	AUDIO IN
10	AUDIO OUT

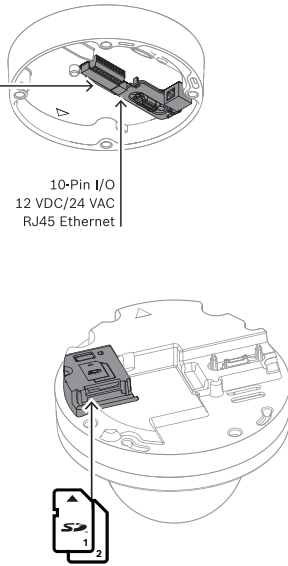


3 |

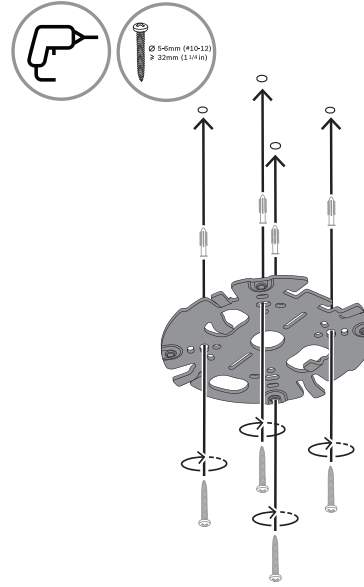


4 |

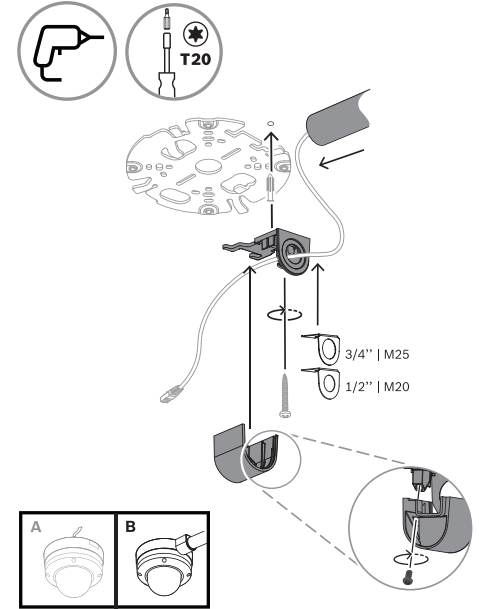


5 |

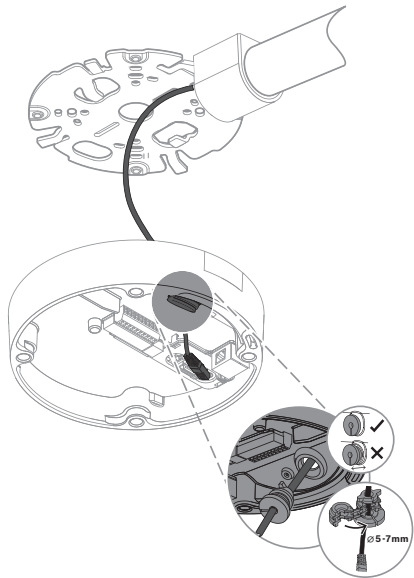


6 |

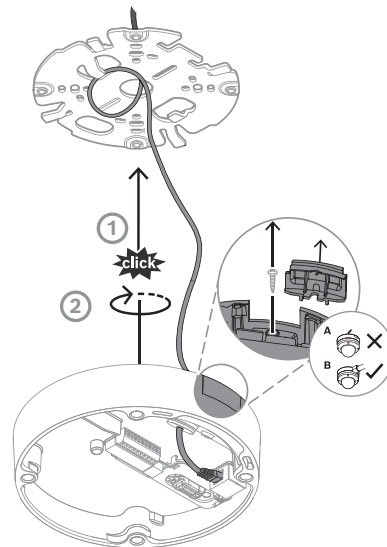

7 |


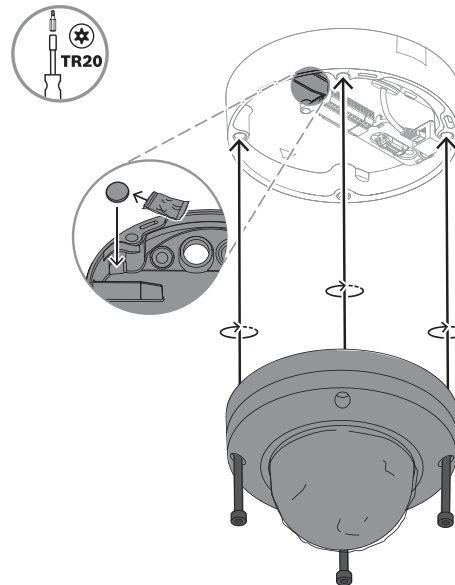


8 |

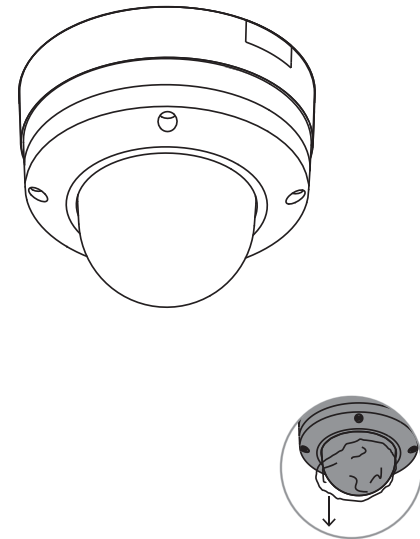

Project Assistant app

Windows | iOS | Android
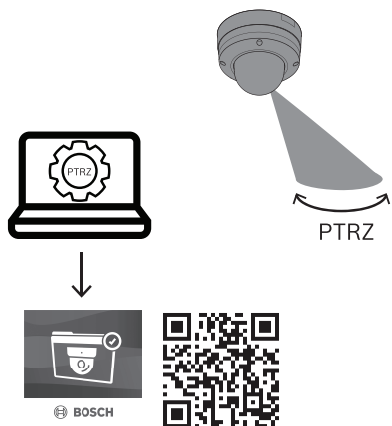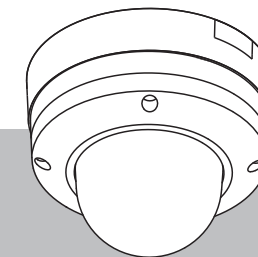
<https://downloadstore.boschsecurity.com/>**FLEXIDOME IP starlight 8000i**NDE-8512-R | NDE-8512-RT | NDE-8513-R |
NDE-8513-RT | NDE-8514-R | NDE-8514-RT |
NDE-8512-RX | NDE-8512-RXT |
NDE-8513-RX | NDE-8513-RXT

en Quick installation guide

Bosch Security Systems B.V.

Torenallee 49

5617 BA Eindhoven

Netherlands

www.boschsecurity.com

© Bosch Security Systems B.V., 2023