
# Installation Instructions for the SE88 Wallmount Bracket

#### Introduction

The SE88 Wallmount Bracket is designed to work with the SE88 Watch/Pendent Panic Transmitter. It allows the user to mount the panic transmitter on any solid surface.

Figure 1: SE88 Wallmount Bracket

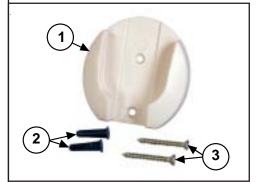

### **Attaching the Mounting Bracket**

The mounting bracket can be attached to any solid surface using the provided hardware.

Figure 2: Mounting the Bracket


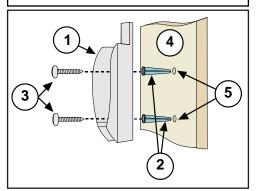


Figure 3: Using the Bracket

Storing the SE88

neck strap.

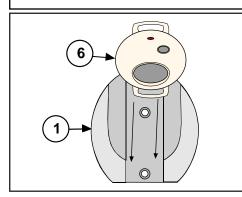

The SE88 can be stored in the bracket.

It is not necessary to remove the wrist or

- 1 SE88 Wallmount Bracket
- 2 Wall anchors
- 3 Screws

- 4 Wall
- 5 Holes 4.8 mm (0.1875 in.)
- 6 SE88 Panic Transmitter



© 2003 Bosch Security Systems 130 Perinton Parkway, Fairport, NY 14450-9199 USA Customer Service: (800) 289-0096; Technical Support: (888) 886-6189

50574C Installation Instructions 7/03 SE88 Wallmount Bracket

## Installation Instructions for the SE88 Wallmount Bracket

### Introduction

The SE88 Wallmount Bracket is designed to work with the SE88 Watch/Pendent Panic Transmitter. It allows the user to mount the panic transmitter on any solid surface.

## **Attaching the Mounting Bracket**

The mounting bracket can be attached to any solid surface using the provided hardware.

# Storing the SE88

The SE88 can be stored in the bracket. It is not necessary to remove the wrist or neck strap.

Figure 1: SE88 Wallmount Bracket

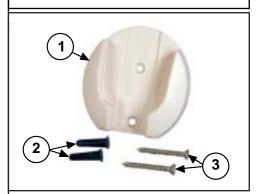


Figure 2: Mounting the Bracket


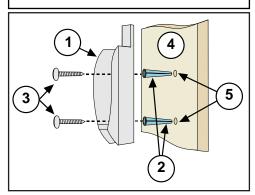


Figure 3: Using the Bracket



- SE88 Wallmount Bracket
- 2 Wall anchors
- 3 Screws

- 4 Wall
- 5 Holes 4.8 mm (0.1875 in.)
- 6 SE88 Panic Transmitter

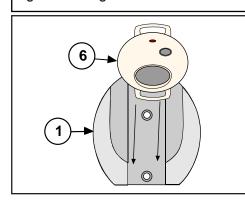

© 2003 Bosch Security Systems 130 Perinton Parkway, Fairport, NY 14450-9199 USA Customer Service: (800) 289-0096; Technical Support: (888) 886-6189

50574C Installation Instructions

SE88 Wallmount Bracket