

Safety

Danger!



Electricity

Injuries due to electricity are possible if the system is not operated correctly or if the system is opened or modified.

- Never open or modify the system.
- Please contact your installer if you want to get your system modified.

Caution!

Sensitive components



Damage of sensitive components is possible if the system is not handled carefully or if the system is opened or modified.

- Always handle the system carefully.
- Never open or modify the system.
- Please contact your installer if you want to get your system modified.

Old electrical and electronic appliances

Electrical or electronic devices that are no longer serviceable must be collected separately and sent for environmentally compatible recycling (in accordance with the European Waste Electrical and Electronic Equipment Directive).

To dispose of old electrical or electronic devices, you should use the return and collection systems put in place in the country concerned.

Short information

This manual describes the most important operations of the MAP 5000 system. It does not replace the MAP 5000 Operation Manual.

For detailed information and instructions on operation, refer to the MAP 5000 Operation Manual.

System overview

Three light-emitting diodes (LEDs) are located on the left edge of the MAP control center housing:



Element	Component	Description
1	Green LED	Indicates that the control center is in normal condition.
2	Yellow LED	Indicates that there is a trouble condition, that devices are covered, or that devices of the system are bypassed or disabled.
3	Red LED	The default behavior indicates that an alarm condition exists in the security system.

Operation

Logging in

How to log in

1. To view the login screen, tap the screen.

2. In the passcode field, enter your passcode.
The user passcode is a combination of the 3-digit user ID and a 6-digit password (e.g. 004 123456).

⇒ If the passcode is correct, the **Main Menu** is displayed.

Invalid passcode

If the passcode is not correct, an error message is displayed.

1. To empty the passcode field, press .

When an incorrect passcode has been entered ten times, the control center is locked for two minutes per default. These values can be configured by the installer.

Silencing alarms

How to silence the acoustic alarm of the local control center

1. Touch the screen of the local control center.
⇒ The login screen is displayed and the acoustic alarm on the local control center is silenced.

How to silence all acoustic alarms of remote devices

1. Log in to display all acoustic alarms. Refer to *How to log in*, 1.
⇒ The first and last alarms are displayed immediately.
2. To silence the alarms of all remote acoustic devices and control centers, press .
⇒ The alarms of all remote acoustic devices and control centers are silenced.

Arming areas

How to open the Arm menu

1. To open the **Arm** menu, press  and .
⇒ The **Arm** menu with three menu options is displayed.

How to arm

1. Select one of the three menu options to proceed.
⇒ The area and their current arming possibility are displayed.
- An area is ready to arm, if the  icon is displayed.
 - An area is not ready to arm, if the  icon is displayed.

How to arm, if area is ready to arm

- ✓ An area is ready to arm, if the  icon is displayed. All devices in this area are in normal state.
1. To arm an area that is ready to arm, press the desired option or area.
 2. Press .
⇒ A countdown starts, indicating the remaining time to exit the location.
 3. Exit the area within the remaining time of the countdown.
⇒ The area is armed.

How to make an area ready to arm

- ✓ An area is not ready to arm, if the  icon is displayed. There are active or faulted devices in the area.
1. To arm an area that is not ready to arm, press the desired option or area.

2. Press .
 - ⇒ All active or faulted devices, that either can be bypassed or cannot be bypassed, are displayed.
3. Resolve the issues of the listed devices to make this area ready to arm.

How to force arm

1. If you want to arm the area without the devices listed and if the preconditions are fulfilled, press **Force Arm**.

Disarming areas

How to open the Disarm menu

1. To open the **Disarm** menu, press  and .
 - ⇒ The **Disarm** menu with three menu options is displayed.

How to disarm

1. Select one of the three menu options to proceed.
 - ⇒ The area and their current arming status are displayed. An area is armed and can be disarmed if the  icon is displayed.

2. To disarm an area, press the desired option or area.
3. Press .
 - ⇒ The area is disarmed.

Viewing area status

How to open the Status menu

1. To open the **Status** menu, press  and .

2. The **Status** menu with four menu options is displayed.

How to view the area status

1. Press **View Area Status**.
 - ⇒ A list with all areas and their status is displayed. The  symbol indicates that there is detailed information to be displayed for an area. You can also search for areas by name or filter areas according to their arming or disarming status.
2. To view details on the area status, press the  symbol.
 - ⇒ Details on the area status are displayed.



MAP Control Center



en Quick Operation Guide

Bypassing

How to open the Status menu

1. To open the **Status** menu, press  and .
 - ⇒ The **Status** menu with four menu options is displayed.

How to bypass or unbyypass a device

1. Press **Bypass/Unbypass Device**.
 - ⇒ A list with all devices that can be bypassed or unbypassed are displayed. You can also search for devices by name or filter devices according to their fault and bypass status.
2. To change the status of a device, press the button of the device.

- ⇒ The  icon indicates that the device is unbypassed. The  icon and the yellow LED on the control panel indicate that the device is bypassed.

Logging off

How to log off

1. To log off, press .

Troubleshooting

Please contact your installer in case of problems or any unexpected behavior of the system.

For detailed information and instructions on operation, refer to the MAP 5000 Operation Manual.

