


IUI-SKCU3L-320 SmartKey control unit SE 320, LSN



The SE 320 LSNi SmartKey arming device with connectable code keypad/reader or just with code keypad is a system solution for arming/disarming intrusion alarm systems.

Arming/disarming is carried out by using the SmartKey key then entering the user code.

System overview

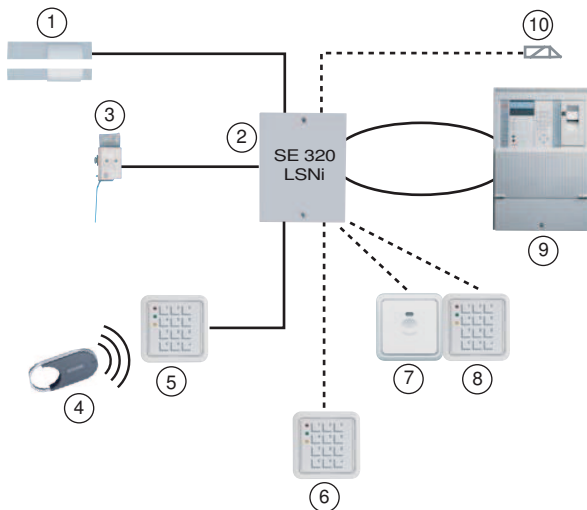

- 1 SPE blocking element
- 2 SE 320 LSNi control unit
- 3 Bolt contact
- 4 SmartKey keys
- 5 Code keypad with integrated reader

- ▶ Manipulation or tampering is impossible
- ▶ Door opener relays and blocking elements can be connected
- ▶ Simple, non-contact operation with clear signaling
- ▶ Code keypads can be used as a "coded arming device"
- ▶ Logging and programming via the control panel

- 6 Code keypad (as autonomous code keypad)
- 7 Reader
- 8 Code keypad
- 9 LSN control panel
- 10 Door opener relay or blocking element for vault doors

Functions

Individual system components can be put together depending on the usage conditions required. Further connection options for blocking elements for vault doors and door openers are possible. Operation modes with or without the SPE blocking element are possible.

The SE 320 LSNi control unit processes the status reports of all components in the system, communicates these reports to the intrusion alarm system and controls the blocking element. The control unit has a connection line for connecting bolt contacts and two primary lines. The control unit is mounted in the secure area.

SmartKey code keypad with integrated reader

The SmartKey code keypad with integrated reader combines the function of the reader and the SmartKey code keypad in one unit. Initial set-up and operation is the same as with one reader + one code keypad.

The reader for the SmartKey key is located in the middle of the unit (not visible from the outside). To operate, you hold the SmartKey key in the middle of the SmartKey code keypad (with integrated reader)

at a maximum distance of 2 cm. The code keypad with integrated reader allows arming and disarming of the intrusion alarm system only after the correct combination of numbers has been entered at the code keypad.

Arming/disarming is carried out by using the SmartKey key then entering the user code.

If someone is forced to disarm the intrusion alarm system, a silent alarm (hold-up alarm) can be set off remotely via the code keypad. The code keypad can be surface mounted or flush mounted (outside the secure area).

Reader

Arming and disarming is carried out using an electronic key on the reader. LED and buzzer provide information about the status of the system as well as operation. The reader can be surface mounted or flush mounted (outside the secure area).

Reader and code keypad

The code keypad, used in conjunction with the reader, allows arming and disarming of the intrusion alarm system only after the correct combination of numbers has been entered at the keypad.

Arming/disarming is carried out by using the SmartKey key then entering the user code.

If someone is forced to disarm the intrusion alarm system, a silent alarm (hold-up alarm) can be set off remotely via the code keypad.

It can be surface mounted or flush mounted (outside the secure area). For flush mounting, two IP55 flush-mounted junction boxes may be used in combination, if required. One on top of the other or next to each other.

Reader and lockable code keypad

The code keypad, used in conjunction with the reader, allows arming and disarming of the intrusion alarm system only after the correct combination of numbers has been entered at the keypad. If someone is forced to disarm the intrusion alarm system, a silent alarm (hold-up alarm) can be set off remotely via the code keypad. The code keypad can be surface mounted or flush mounted (outside the secure area).

Code keypad (as autonomous code keypad)

The SmartKey code keypad with integrated reader can also be connected as an autonomous code keypad. The code keypad allows arming and disarming of the intrusion alarm system only after the correct combination of numbers has been entered at the code keypad. If someone is forced to disarm the intrusion alarm system, a silent alarm (hold-up alarm) can be set off remotely via the code keypad. The code keypad can be surface mounted or flush mounted (outside the secure area).

Keys with a security card

The system operates like a locking device. The key kit consists of a set number of valid keys and a security card. The control unit is initialized using the security card, and accepts only the keys of the key kit. To

order additional keys, the security card must be sent to the manufacturer together with the order. The keys are labeled with a consecutive key number, a security card number and an 8-digit identification number.

Standard key (without security card)

The keys are not numbered and can be read in as often as required. The keys are labeled with an 8-digit identification number.

SPE blocking element

The SPE blocking element is an additional lock for the door and is intended to prevent unauthorized entry to the armed area. The SPE blocking element must always be mounted in the secure area with a kit to allow it to be fitted out for different door types.

Blocking elements for vault doors

The E4.4 and E4.3 blocking elements are electromechanical blocking units that are intended for installation in vault doors or doors on safes or automatic teller machines. The blocking elements are not used as switching equipment; arming occurs via SmartKey. The blocking element for vault doors is included in the forced actuation system for arming. It is not possible to simultaneously connect an E4.4/E4.3 blocking element and an SPE blocking element and/or a door opener relay.

Door opener relay

There is a relay for activating a door opener relay on the control unit; 60 W DC (2 A, 30 V DC). Parameters must be defined for connecting the door opener; activation is only possible with an unarmed control panel and an open bolt contact. Setting of a time delay and an activation time is programmable. The door opener relay can also be activated using a push-button via PL2. Simultaneous connection to a blocking element is not possible for vault doors.

Switching point activation

There is a freely programmable C point switch output (open collector output) 12 V, max. 80 mA on the control unit.

Bolt contact/magnetic contact

A conventional bolt contact should be fitted to the control unit (not part of the scope of delivery).

A standard magnetic contact can be connected to the control unit (not part of the scope of delivery).

Regulatory information

Region	Regulatory compliance/quality marks	
Europe	CE	SE 320 LSNi
	CE	SmartKey
Germany	VdS	G106065

Installation/configuration notes

Number of SmartKey keys

A maximum of 16 SmartKey keys can be used per system if the SmartKey key is read in at the reader. In other respects, the number of SmartKey keys depends on the control panel: NZ 300 LSN = 40 keys, UEZ = 255 keys.

SE 320 LSNi without bolt contact

Due to the time shift caused by the LSN, up to four SE 320 LSNi can be activated in 200 ms (not arming time). In general, a bolt contact should be mounted.

SPE blocking element

- If several LSN SmartKey systems need to block simultaneously in one area (motorized block locking function), the control units must be in the same LSN processing assembly (on LVM for UEZ, on NV 120 for UGM).
- The SPE blocking element is always mounted in the secure area with a mounting kit.

Connection options

- E4.4 blocking elements for vault doors/conversion kit: When connecting an E4.4 blocking element/conversion kit, no SPE blocking element or door opener relay may be connected.
- Door opener relay: When connecting a door opener relay, no E4.4 blocking element/conversion kit may be connected for vault doors.
- Push-button for door opener relay: A lockable code keypad cannot be connected when connecting a push-button for the door opener.

Activation switching point

There is a freely programmable C point switch output (open-collector output) 12 V, max. 80 mA on the control unit. The max. length for a connected cable is 3 meters.

The yellow LED on the SmartKey code keypad is connected to the C point as standard. An appropriate series resistor is fitted for connecting the C point to the yellow LED on the SmartKey code keypad. If the C point is assigned for a use other than the yellow LED on the SmartKey code keypad, this series resistor must be bypassed by connecting the solder points (back of circuit boards).

Parts included

Quantity	Component
1	SmartKey arming device control unit

Technical specifications

Electrical

Minimum operating voltage in VDC	9.6
----------------------------------	-----

Maximum operating voltage in VDC	30
Total current consumption in mA, including blocking element (input voltage: 9.6 VDC)	
• Standby LSN part	3.53
• Standby additional supply	41
• Bolt engaged for 200 ms	110
• Bolt blocked for 200 ms	470
Total current consumption in mA, including blocking element (input voltage: 28 VDC)	
• Standby LSN part	3.53
• Standby additional supply	30
• Bolt engaged for 200 ms	65
• Bolt blocked for 200 ms	200
C-point switch output (open collector output) in VDC/mA	12/80
Maximum length for a connected cable in m	3
Relay outputs with 2 changeover contact sets	
• Switching performance	60 W DC (2 A, 30 V DC)
• Activation current with input voltage 9.6 VDC in mA	20
• Activation current with input voltage 28 VDC in mA	8

Mechanical

Dimension in cm (H x W x D)	16.0 x 13.5 x 3.5
Housing material	ABS
Color	RAL 9002
Weight in g	250

Environmental

Minimum operating temperature in °C	-5
Maximum operating temperature in °C	45
Minimum storage temperature in °C	-40
Maximum storage temperature in °C	85
Environmental class	II

Protection class	IP30
------------------	------

Ordering information

IUI-SKCU3L-320 SmartKey control unit SE 320, LSN

For arming/disarming an intrusion alarm system via a code keypad with integrated reader or just with a code keypad as a system solution

Order number **IUI-SKCU3L-320 | F.01U.523.520**

Accessories

4998021692C20 SmartKey reader

Order number **4998021692C20 | 4.998.021.692.C20**

F01U511348 SmartKey, 3 keys with security card

Order number **F01U511348 | F.01U.511.348**

F01U511349 SmartKey, 1 key, additional

Order number **F01U511349 | F.01U.511.349**

F01U511350 SmartKey, standard key

Order number **F01U511350 | F.01U.511.350**

4998112166 SmartKey arming device

Order number **4998112166 | 4.998.112.166**

4998113948 SmartKey reader with keypad

Order number **4998113948 | 4.998.113.948**

4998113951 SmartKey reader, replacement foil

Order number **4998113951 | 4.998.113.951**

IUI-SKKPAC SmartKey reader, blinds, VdS-C

Order number **IUI-SKKPAC | 4.998.149.197**

4998013609C20 Surface-mount kit for blocking element

Order number **4998013609C20 | 4.998.013.609.C20**

4998021691C20 Blocking element, recess-mount kit

Order number **4998021691C20 | 4.998.021.691.C20**

4998019339C20 Blocking element, glass door mount kit

Order number **4998019339C20 | 4.998.019.339.C20**

Represented by:

Europe, Middle East, Africa:
Bosch Security Systems B.V.
P.O. Box 80002
5600 JB Eindhoven, The Netherlands

Germany:
Bosch Sicherheitssysteme GmbH
Robert-Bosch-Platz 1
D-70839 Gerlingen

North America:
Bosch Security Systems, LLC
130 Perinton Parkway
Fairport, New York, 14450, USA

Asia-Pacific:
Robert Bosch (SEA) Pte Ltd, Security Systems
11 Bishan Street 21
Singapore 573943